




Installation instructions for the one-inch body lift for TJs (BL1T)



- Each body lift kit includes:
- 11 Aluminum body lift spacers
 - 2 Radiator brackets
 - 1 Shift linkage plate
 - 6 Bolts (1/2" x 4.5")
 - 4 Bolts (7/16" x 3.5")
 - 1 Bolt (7/16" x 4")
 - 2 Bolts (1/4" x 3/4")
 - 2 Self-tapping bolts (3/8" x 1")
 - 2 Lock nuts (1/4")
 - 6 Flat washers (1/2")
 - 5 Flat washers (7/16")

Tera Manufacturing, Inc.
5251 South Commerce Dr.
Murray, Utah 84107
Phone/801.288.2585
Fax/801.288.2571
www.teraflex.biz

Use shift linkage plate to adjust the transfer case shift linkage. If you have spaced your transfer case skid plate down then use the out pair of holes on each end of the plate. If you are not using any spacers between your frame and the transfer case skid plate, use the inner set of holes as shown.

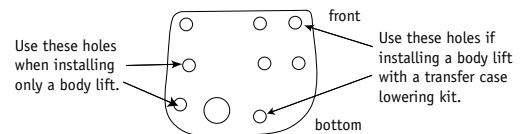

Use the 7/16" x 4" bolt for the front grill mount. The aluminum spacers install between the frame and the beveled steel washers on top of the rubber body mounts. The radiator brackets mount above the frame and below the torque pads on the lower side of the grill. Drill one 5/16" hole in each side of the frame to anchor the bracket under the torque pads using the 3/8" self-tapping bolts.

Caution: Check clearance between fan and fan shroud. Fan shroud may need to be relocated 1" lower by redrilling mounting holes in the shroud.